



Mazda 626 cable repair kit for CD4E transmission

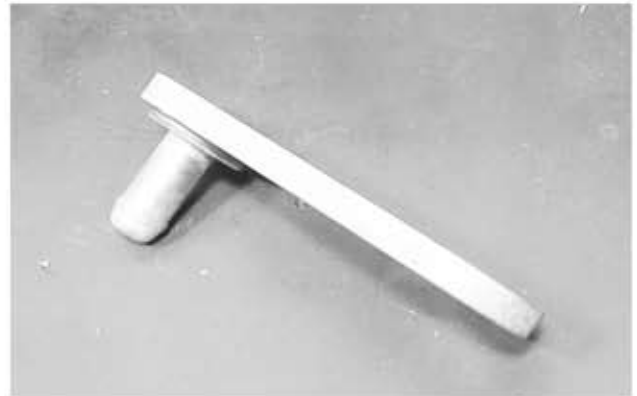

Take the original lever and grind off material flush from the backside of lever. This material was used to stake in original pin.



Then remove old pin using a hammer and punch. To simplify removing pin, lay the lever on top of vise jaws then hit pin with hammer and punch.

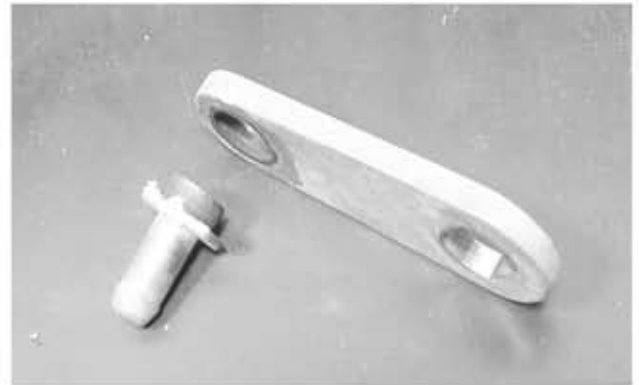

After removing pin and cleaning cable end, insert pin thru cable then thru the lever. Install E-clip on backside.

